


HV OPTION: **MINI MOLLE PANELS**

PARTS INCLUDED:

- MINI MOLLE PANEL (550059)
- MOLLE PANEL TEMPLATE (550059-T)
- 4X 10-24 BUTTON HEAD SCREWS (PER MOLLE PANEL)
- 4x #10 WASHERS (PER MOLLE PANEL)
- 4x 10-24 RIVNUT (PER MOLLE PANEL)



TOOLS REQUIRED:

- ALLEN WRENCH
- #30 DRILL BIT
- \varnothing 19/64" DRILL BIT
- RIVNUT PULLER WITH 10-24 CAPABILITY

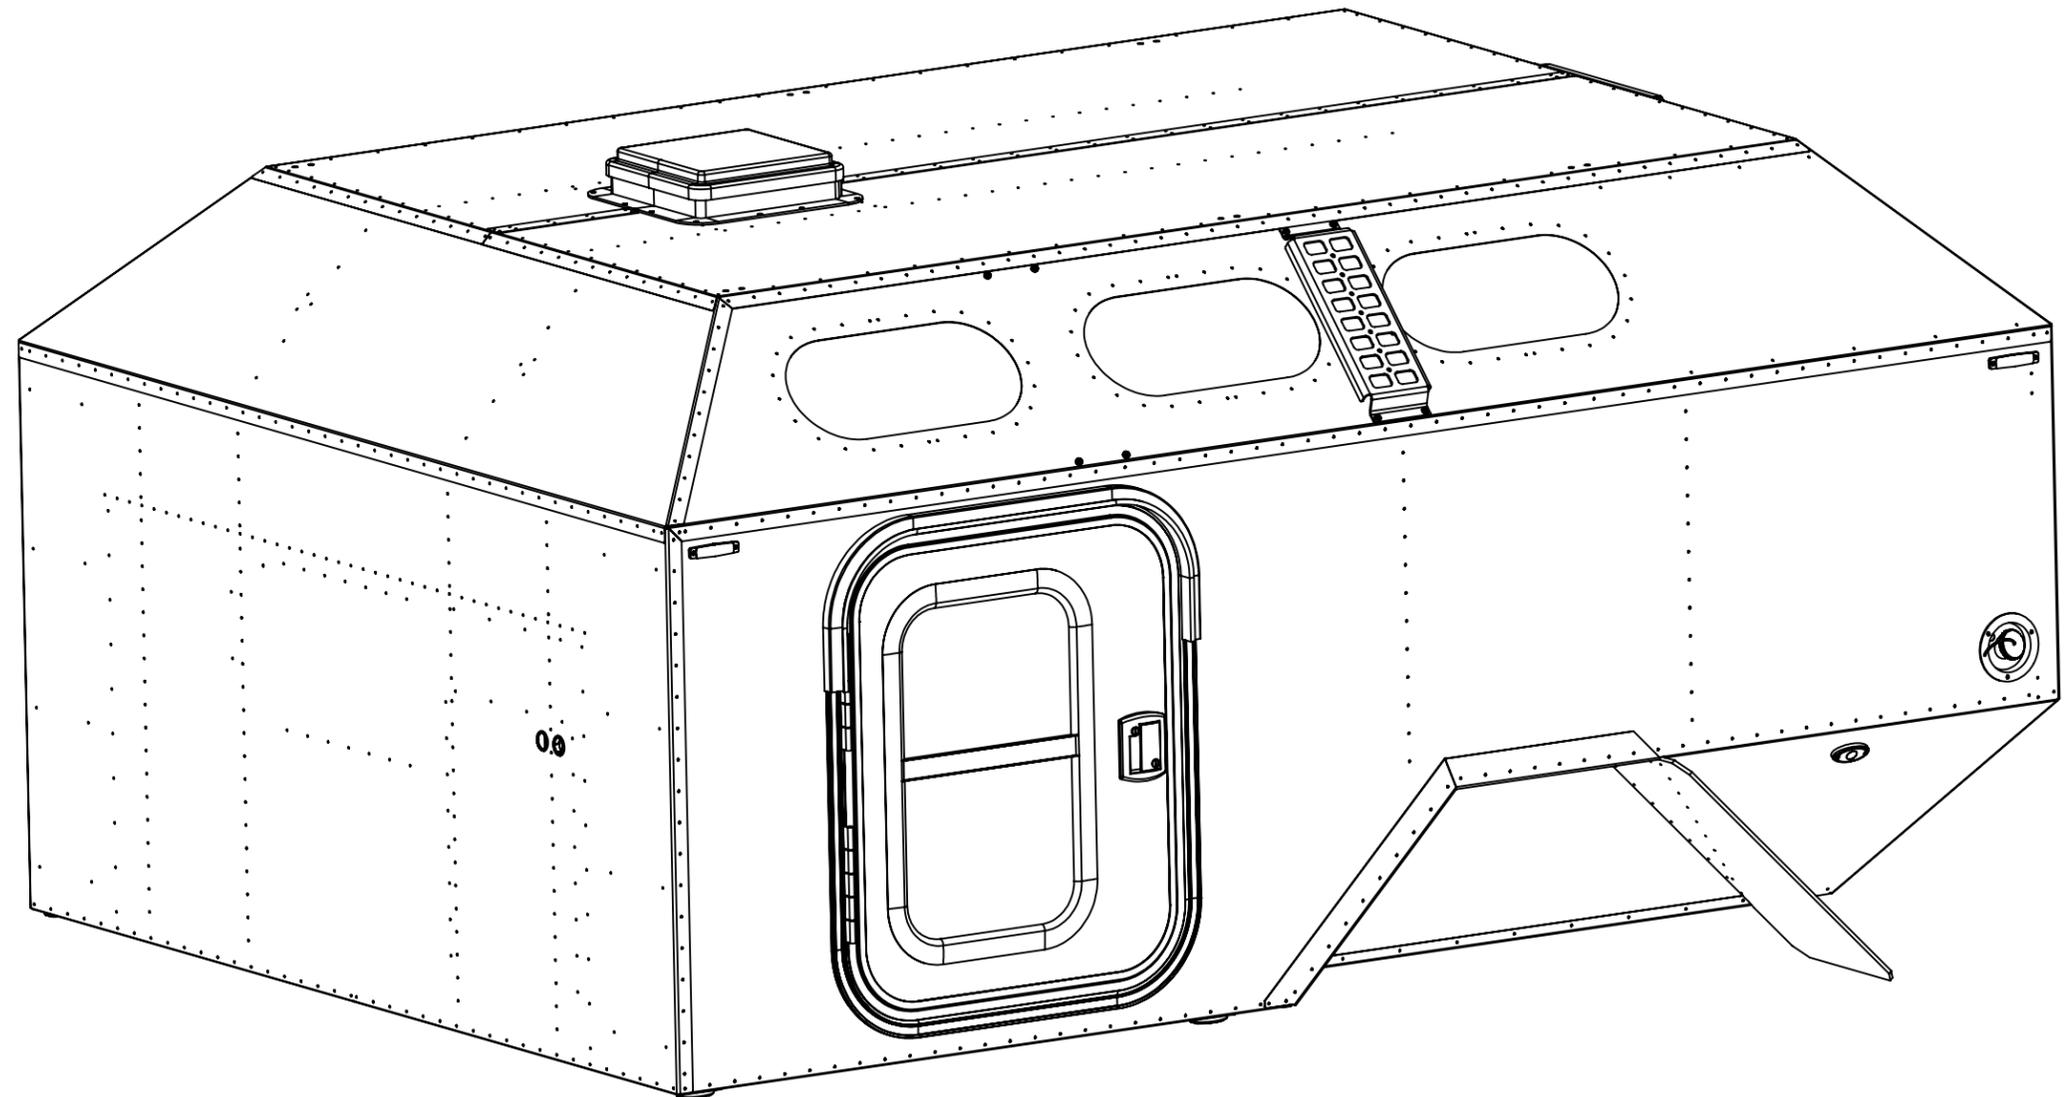

Step 1:

-POSITION template as shown

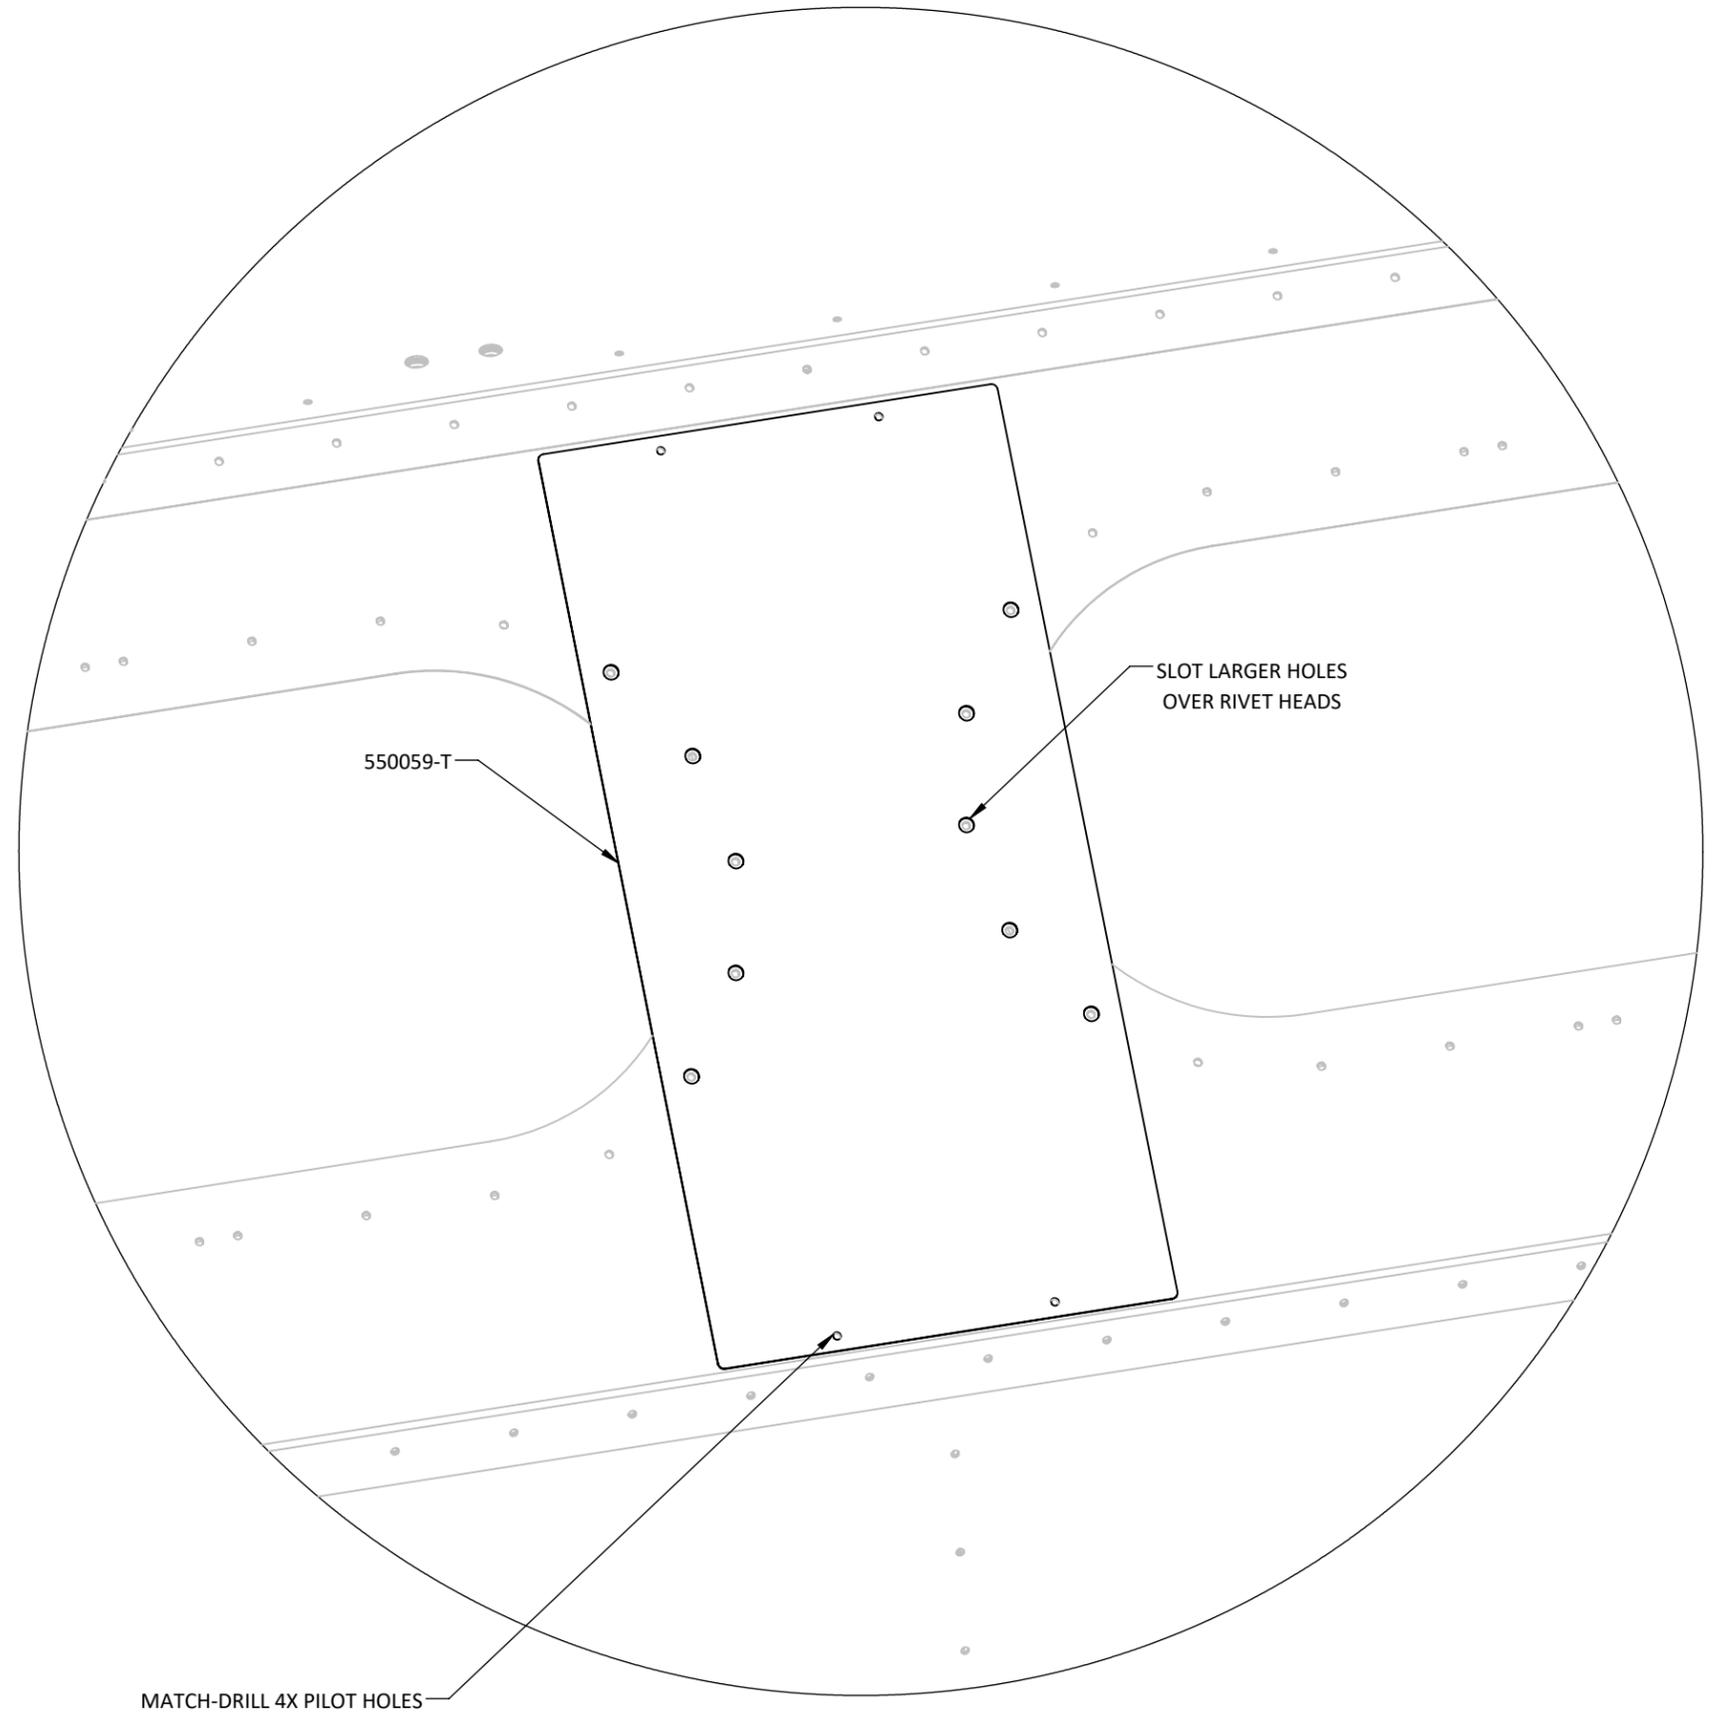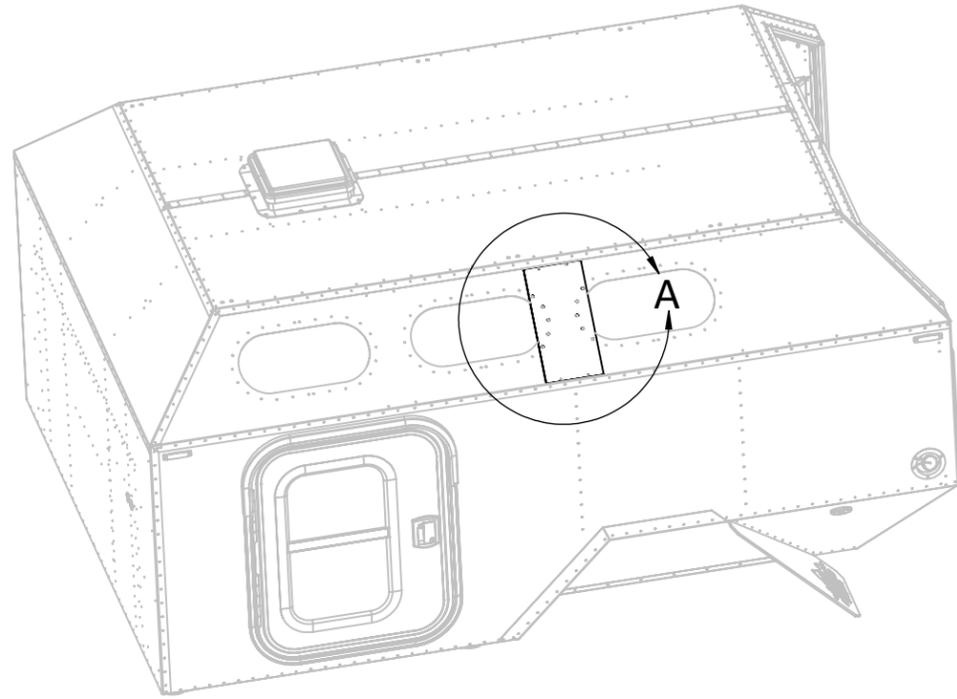

Step 2:



-DRILL pilot holes with #30 bit

Step 3:

-UPSIZE pilot holes to $\phi 19/64$ "

Step 1:

-INSTALL 4X 10-24 rivnuts into upsized holes

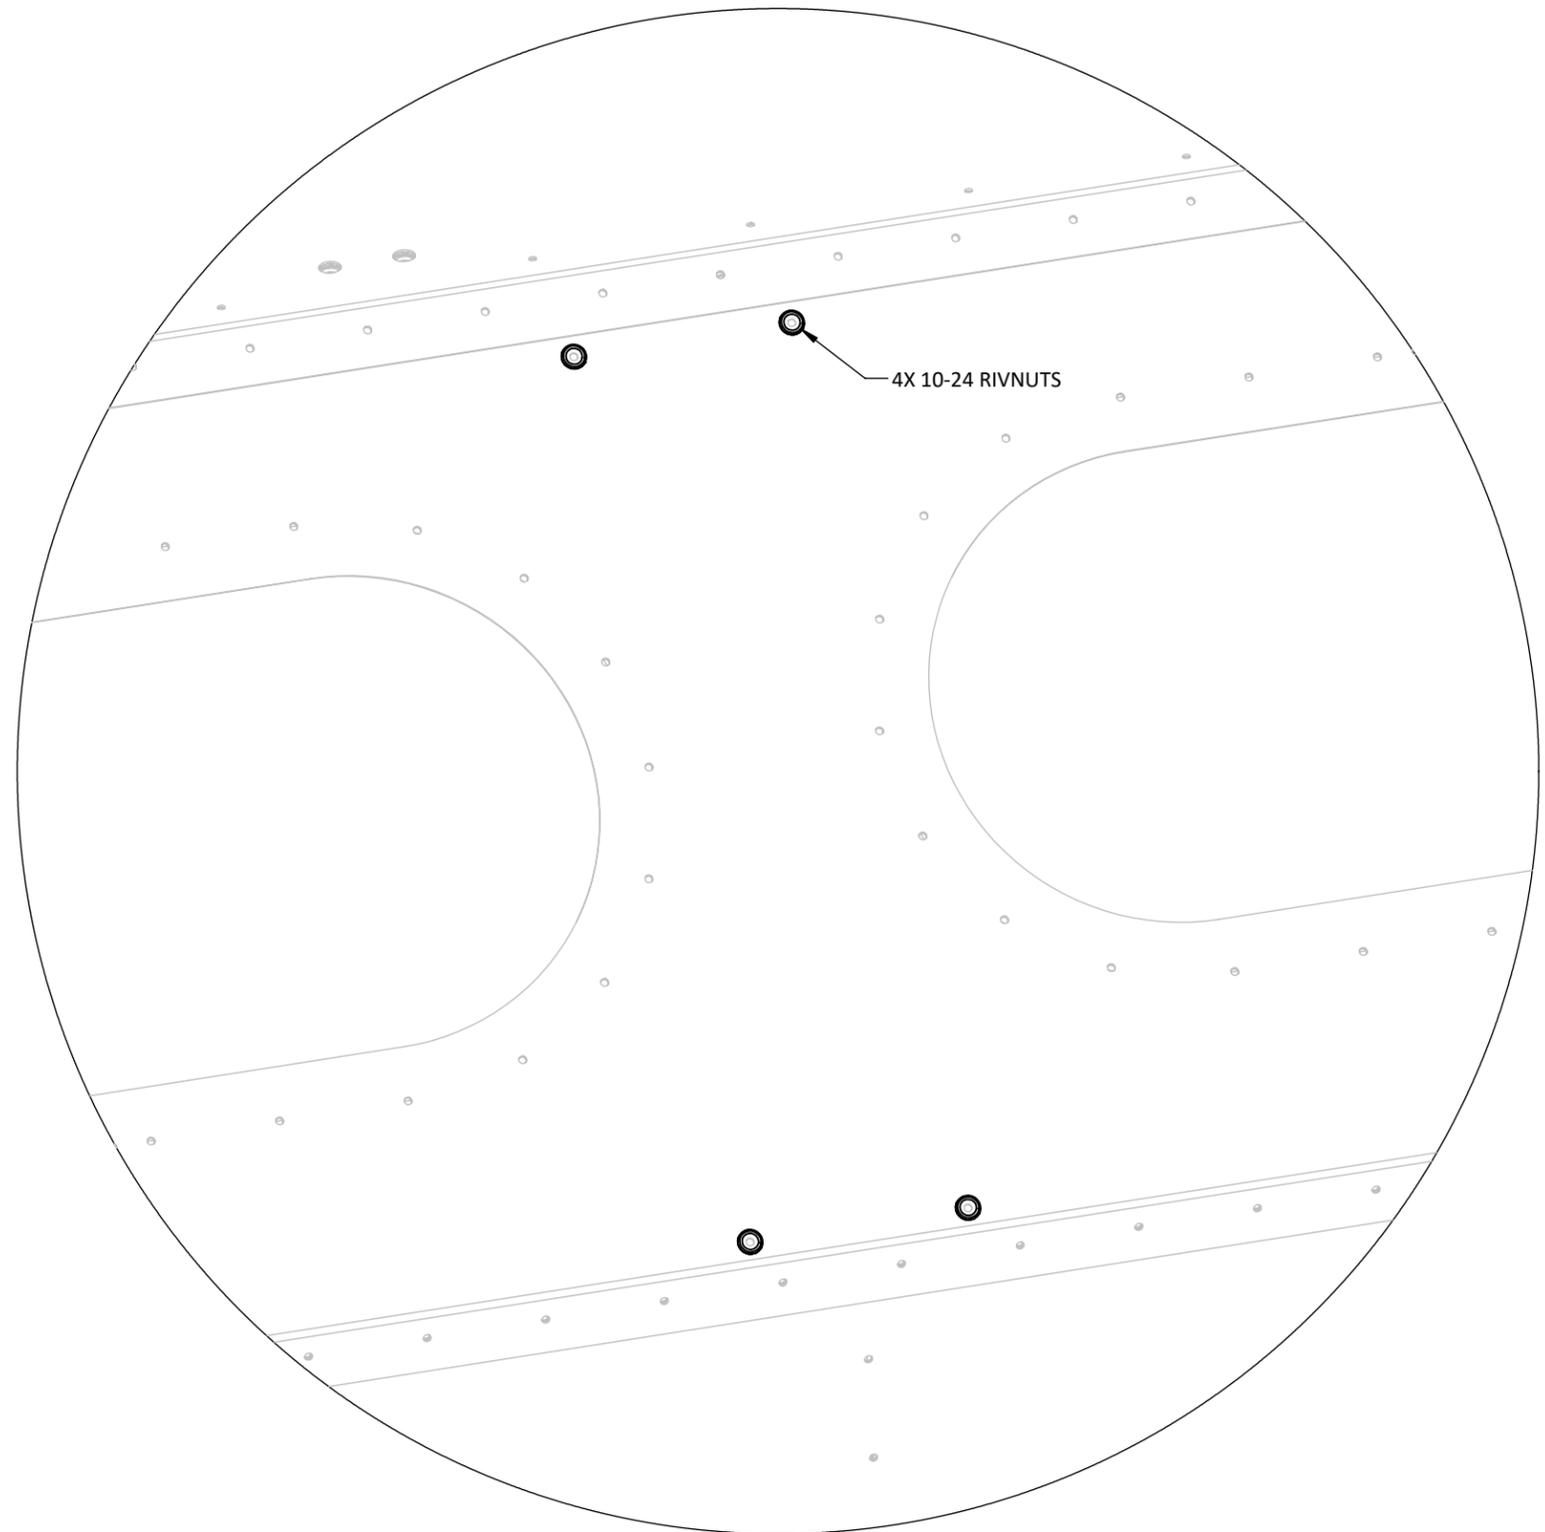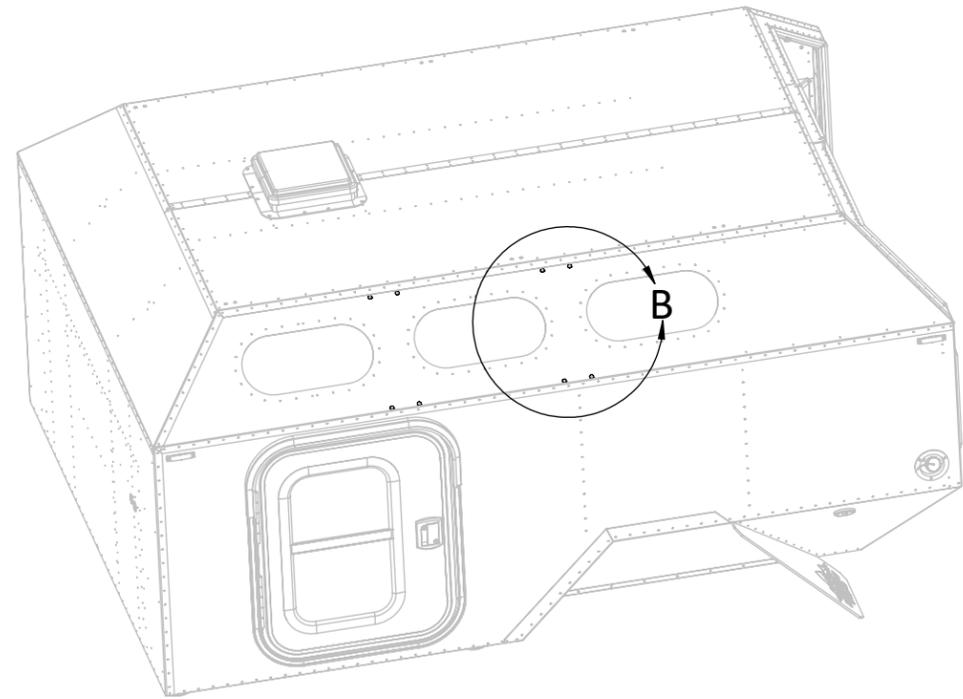

Step 1:
-INSTALL hardware as shown

